Installation instruction for H BOX drawers

CANMADE MONTREAL QUINCAILLERIE I HARDWARE

CEMUX

Installation dimensions-Back panel

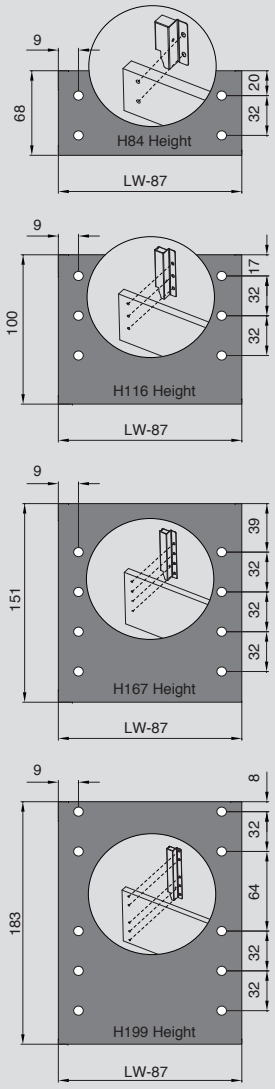

Cutting dimensions - Back panel

- 16mm-thickness wooden panel
- Width = LW-87mm
- Height: As shown above

Product specification

* The H13 series are applicable to all wooden materials, including solid wood, particle board, MDF and etc;
* The loading capacity is 40kgs
* There is an end stop when the drawers are fully extented;
* Front panel demension: Max height 400mm, Max width 900mm;
* The corrosion test has been carried out 3 AHT acc. to EN ISO 6270-2

Installation dimensions-Drawer runners

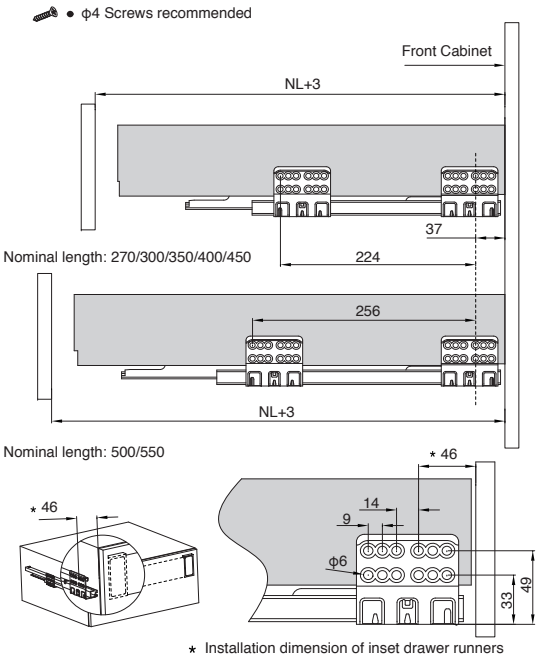

* Installation dimension of inset drawer runners

Cabinet space requirement

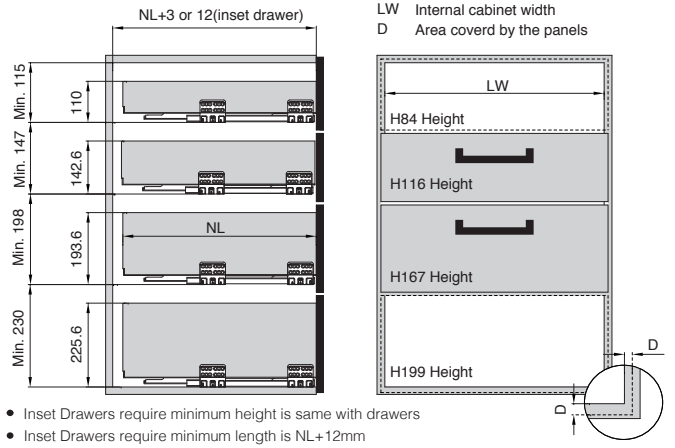

- Inset Drawers require minimum height is same with drawers
- Inset Drawers require minimum length is NL+12mm

Cutting dimensions - Bottom panel

- 16mm-thickness wooden panel
- Width = LW -75mm
- Length = NL -10mm

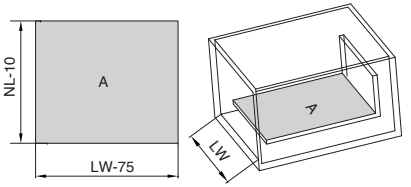

Drawer installation

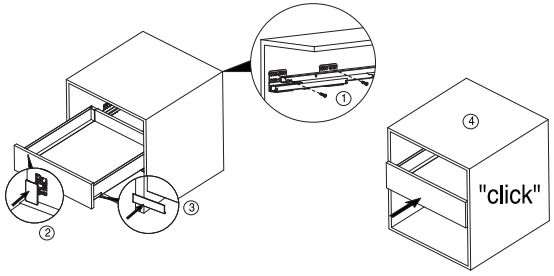

Drawer remove

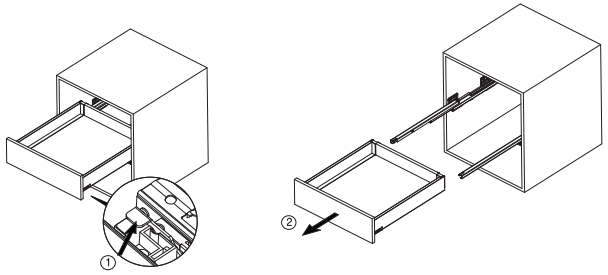

Hole dimensions

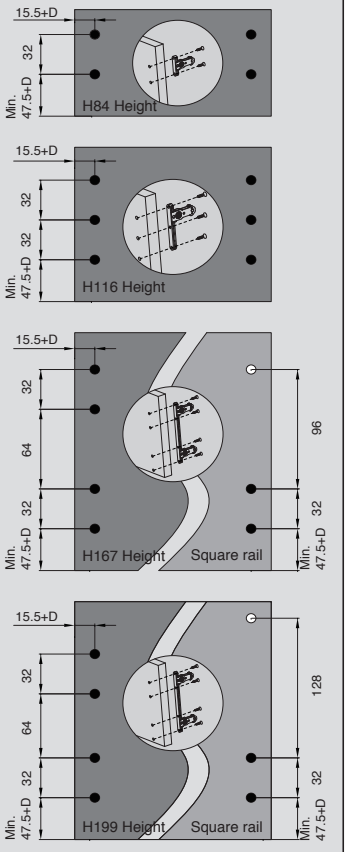

- Front bracket
- Square rail

Cutting dimensions for accessories

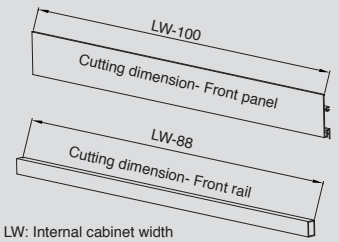

LW: Internal cabinet width

A0

G

Installation instruction for H BOX drawers

Drawer installation

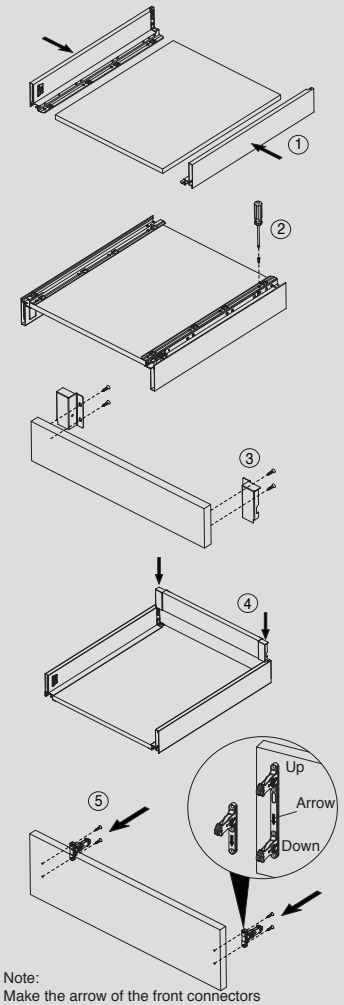

- Note:
  Make the arrow of the front connectors downwards for drawers with Height 116/167/199 during installation.

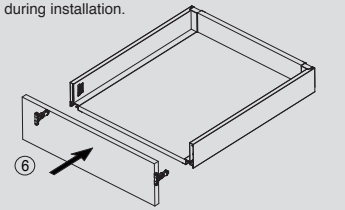

Adjustment

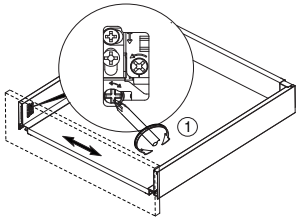

- ±1.5 mm Rightward/Leftward Adjustments
- Use the corresponding adjustment screws during operation

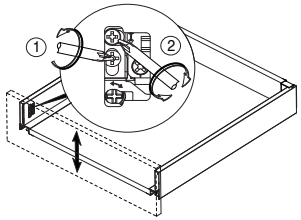

- ±2 mm Upward/Downward Adjustments
- Unlock the screws before the operation.

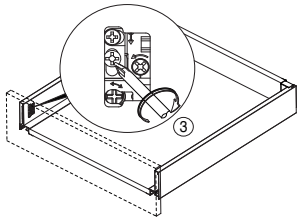

- Lock
- Lock the screws after adjustments.

Installation of the front panel for low inset drawers

- H84 Height

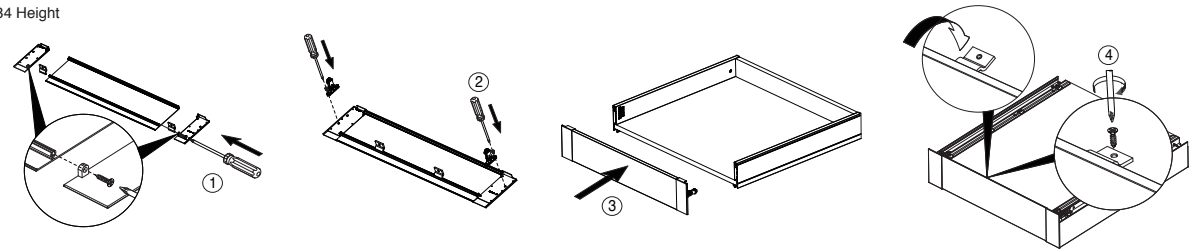

Installation of the front panel with heighten panel for H167 & H199 inset drawers

- H167 & H199 Height

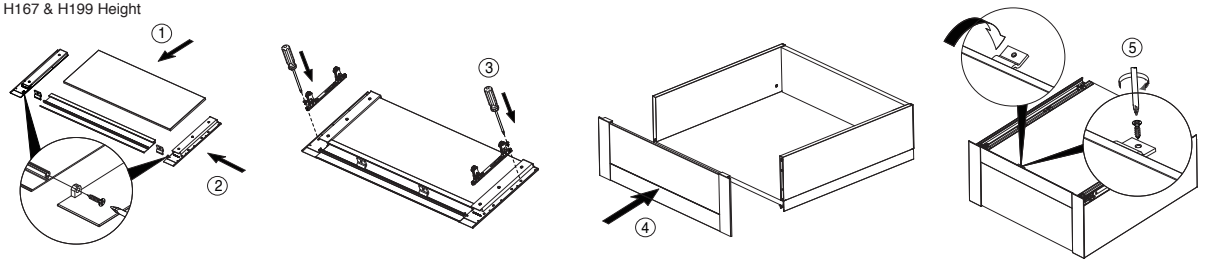

Installation of the front panel with front rail for H167 & H199 inset drawers

- H167 & H199 Height

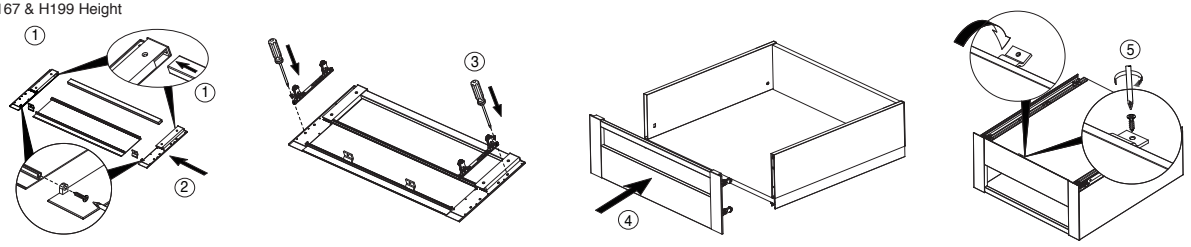

Remove cover caps

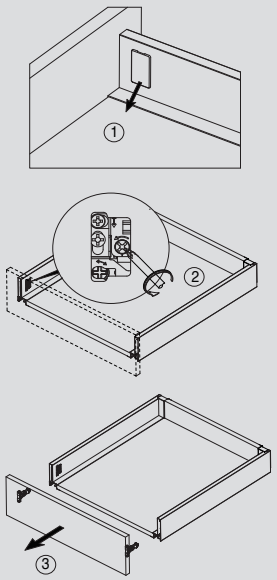

Installation of square rails

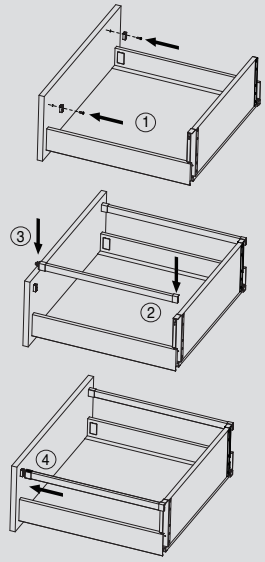

G